


Lock-Top™ Energy-Saving Fireplace Damper with Chimney Fire Safety Device


To install the Lock-Top Damper, you will need these tools: drill, hammer, wire pliers, 1/4" masonry bit, 1/2" open end or adjustable wrench.

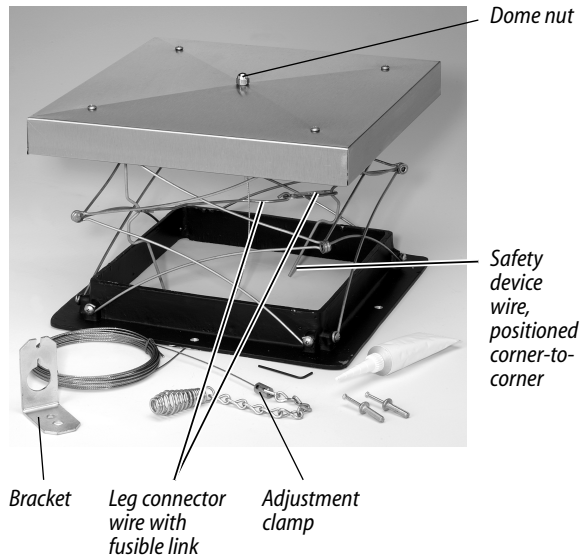

© 2004 Gelco Lyemance Lock-Top

Installation Instructions


1. Find the **safety device wire** located under the damper lid. Find the spring-loaded **connecting tube with jam nut, cable, and handle** in the hardware bag. Find the **leg connector wire with fusible link** in the bag, also. Remove dome nut from the end of connecting tube, and assemble **chimney fire safety device** as shown at right. The chimney fire safety device must be installed for the warranty to be in effect.
2. Insert threaded end of conduit tube into underside of damper lid. Position **safety device wire** corner-to-corner and re-tighten **dome nut** onto end of bolt. Turn jam nut an additional 1/4 turn with wrench to secure.
3. Spread 1/4" bead of furnished adhesive around top of chimney opening. Insert cable and handle down chimney making sure they extend into fireplace. Center damper on top of chimney and press down firmly on frame. Fill any gaps with adhesive to ensure a proper seal. Allow adhesive to set 24 hours before using damper. (If using a Sweep's Ring, sold separately, apply the ring to the adhesive and screw damper to ring.)
4. Bracket installation: Drill 1/4" hole in firebrick toward front of fireplace, approximately 20" off firebox floor. Insert nail anchor through top hole of bracket and into hole in brick. Fasten. Be sure bracket is straight and then use second hole in bracket as guide to drill a second hole in brick. Fasten with second anchor nail.
5. Thread handle, chain, and cable through bracket hole until all slack is out of cable. Loosen brass adjustment clamp with Allen wrench and slide it up cable to bracket. Pull the cable to close damper, and adjust clamp position for the tightest seal. Tighten screw in clamp with Allen wrench. Cut and discard excess cable.

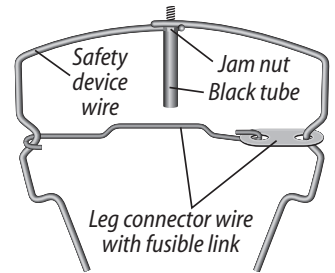

Chimney fire safety device

Lock-Top™ Energy-Saving Fireplace Damper with Chimney Fire Safety Device


To install the Lock-Top Damper, you will need these tools: drill, hammer, wire pliers, 1/4" masonry bit, 1/2" open end or adjustable wrench.

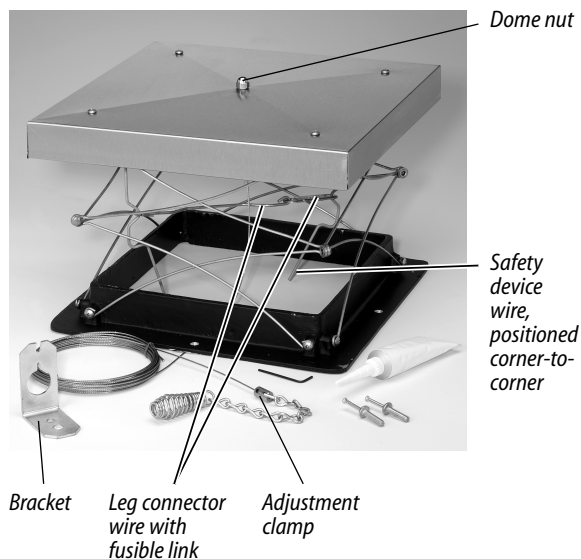

© 2004 Gelco Lyemance Lock-Top

Installation Instructions

1. Find the **safety device wire** located under the damper lid. Find the spring-loaded **connecting tube with jam nut, cable, and handle** in the hardware bag. Find the **leg connector wire with fusible link** in the bag, also. Remove dome nut from the end of connecting tube, and assemble **chimney fire safety device** as shown at right. The chimney fire safety device must be installed for the warranty to be in effect.
2. Insert threaded end of conduit tube into underside of damper lid. Position **safety device wire** corner-to-corner and re-tighten **dome nut** onto end of bolt. Turn jam nut an additional 1/4 turn with wrench to secure.
3. Spread 1/4" bead of furnished adhesive around top of chimney opening. Insert cable and handle down chimney making sure they extend into fireplace. Center damper on top of chimney and press down firmly on frame. Fill any gaps with adhesive to ensure a proper seal. Allow adhesive to set 24 hours before using damper. (If using a Sweep's Ring, sold separately, apply the ring to the adhesive and screw damper to ring.)
4. Bracket installation: Drill 1/4" hole in firebrick toward front of fireplace, approximately 20" off firebox floor. Insert nail anchor through top hole of bracket and into hole in brick. Fasten. Be sure bracket is straight and then use second hole in bracket as guide to drill a second hole in brick. Fasten with second anchor nail.
5. Thread handle, chain, and cable through bracket hole until all slack is out of cable. Loosen brass adjustment clamp with Allen wrench and slide it up cable to bracket. Pull the cable to close damper, and adjust clamp position for the tightest seal. Tighten screw in clamp with Allen wrench. Cut and discard excess cable.

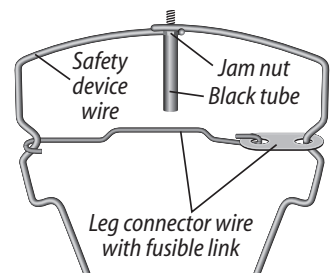

Chimney fire safety device